

Power System Fundamentals

Transmission Facilities

PJM State & Member Training Dept.

Objectives



- Given a typical Transmission line and/or cable, describe the equipment design and components that determine its operational limits
- Describe the operation of line sectionalizing devices and their use
- Given two types of substation configurations, determine which is the most reliable in supporting the BES
- Describe the operation of circuit breakers and their use at substations
- Describe the operation of Circuit Switchers and their use at substations

Objectives



- Describe the operation of disconnects and their use at substations
- Given a BES transformer, describe its operational and design criteria as part of the BES
- Given a Phase Angle Regulator (PAR), describe its basic principle of operation
- Given a BES Shunt Capacitor, discuss its components and its use on the BES
- Given a BES Shunt Reactor, discuss its components and its use on the BES

Objectives



- Given a BES Static Var Compensator (SVC), discuss its components and its use on the BES
- Given a one-line diagram, identify the equipment located at a Substation or Switchyard

Agenda



- BES Transmission Line Equipment
- BES Transmission Substation Equipment
- One-Line Diagrams







Agenda



- List the typical voltage levels of Bulk Electric System (BES) transmission lines
- Recognize the various characteristics of BES Transmission lines and cables
- List the considerations that go into designing the support structures and Rights-of-Way for BES transmission lines
- Describe the effects of corona on overhead transmission lines,
 and 2 methods used to mitigate those effects
- Describe the effects of lightning on overhead transmission lines, and 2 methods used to mitigate those effects
- Describe the features and types of line sectionalizing devices


- Why do we need transmission ??
 - To transmit power from generating plants to the load centers
 - Generating plants are frequently built at sites remote from Load centers
 - Build them near sources of fuel. (Water resources, Coal deposits, wind sources....)
 - NIMBY syndrome
 - Can have a large footprint
 - Environmental effects


- Very inefficient to move power significant distances at lower voltage levels
 - Losses for a line vary according to the square of the current on a line....
 (I²R losses)
 - Any given line can carry only so many amps of current, and so are limited as to the amount of MW they can carry
 - For the same amount of MW flow, the current flow will be much less at a higher voltage
 - So the higher voltage level lines can support significantly more MW flow and remain within their ratings


- What is considered Transmission?
 - NERC/FERC definition;
 - Bulk Electric System (BES) Interconnected Electrical facilities operated at 100 kV and above
 - Radial Transmission is generally not included
 - PJM Transmission voltage levels;

765 kV	500 kV	345 kV
230 kV	138 kV	115 kV

Company Designations may vary...

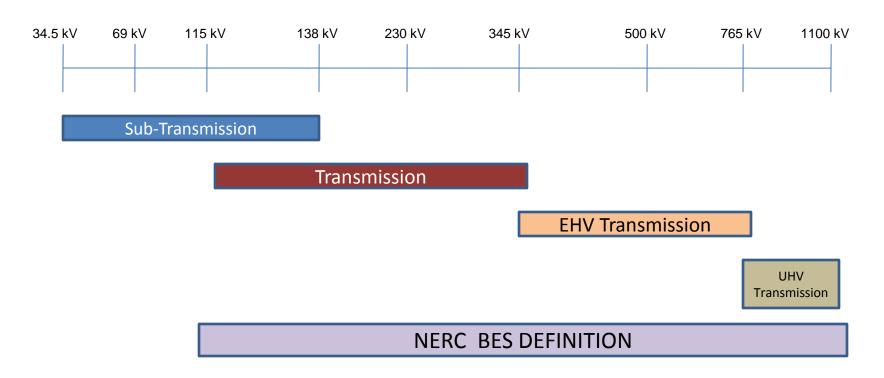

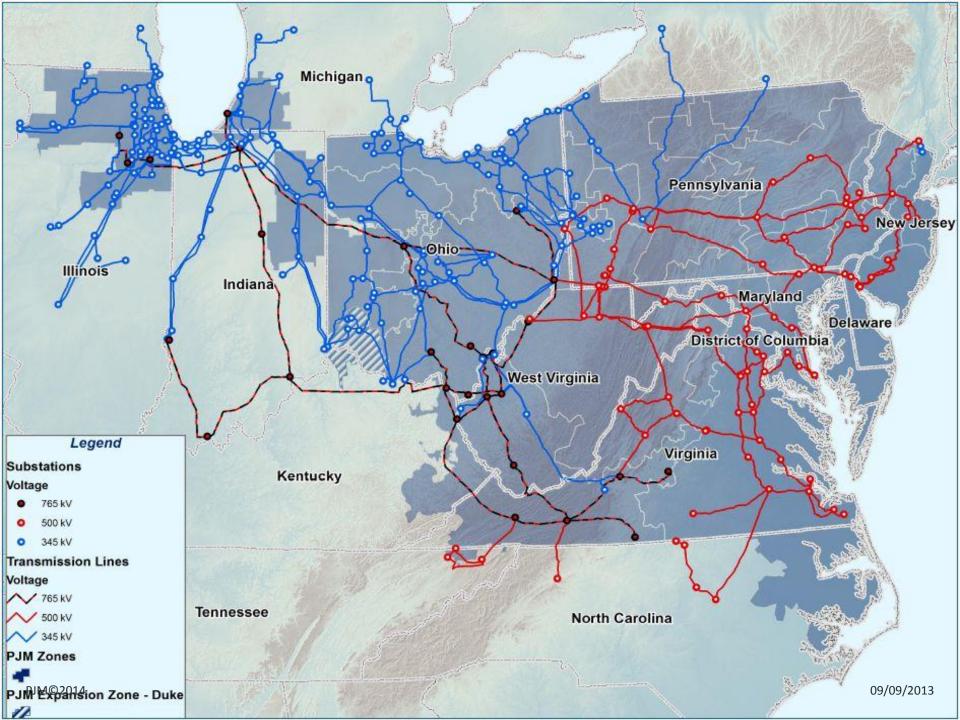

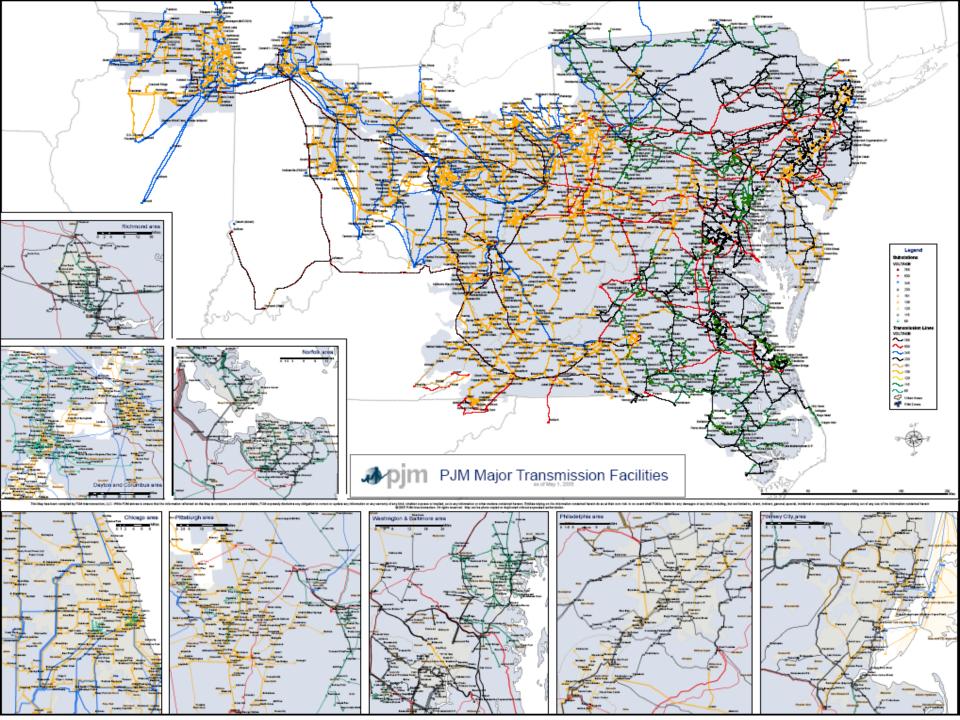


Bulk Electric System (BES)

The Bulk Electric System (BES) within the Reliability First footprint is defined as all:*

- Individual generation resources larger than 20 MVA or a generation plan with aggregate capacity greater than 75 MVA that is connected via a step-up transformer(s) to facilities operated at voltages 100 kV or higher
- ☑ Lines operated at voltages 100 kV or higher
- Transformers (other than generator step-up) with both primary and secondary windings of 100 kV or higher
- Associated auxiliary and protection and control system equipment that could automatically trip a BES facility, independent of the protection and control equipment's voltage level

- Transmission Components;
 - Conductors or the "wires" up in the air
 - Copper
 - Older vintage lines
 - Great conductor material, but is now very costly
 - Not particularly rigid
 - All-Aluminum(AAC) and All-Aluminum Alloy (AAAC)
 - Second-best conductor types
 - Not the most rigid or strong, but light weight
 - OK for use in areas with little or no snow/ice/sleet accumulations

- Aluminum Conductor, Steel Reinforced (ACSR)
 - Most popular type currently being used
 - Higher strength-to-weight ratio than other materials

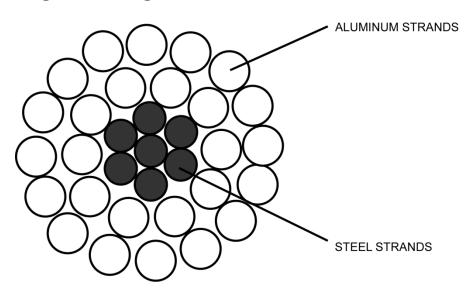


- Steel-Supported Aluminum Conductor (SSAC)
 - Steel alone supports the weight. Much more resistant to sag

- Underground/Underwater Cable
 - Virtually immune to environmental impacts (Weather, trees)
 - Significantly more costly to install (2.5 to 15 X or more)
 - Cable itself is more expensive
 - Requires special equipment to install/maintain
 - Oil-filled cable systems can present operating challenges, especially during a system restoration
 - Special transition "Terminators" required between overhead and underground sections
 - If a fault does occur on the Cable, repair times are significantly longer than for overhead lines
 - Capacitive charging for cables is much higher than for an overhead line. (Greater source of VARS)




Representative Transmission Cable schematics

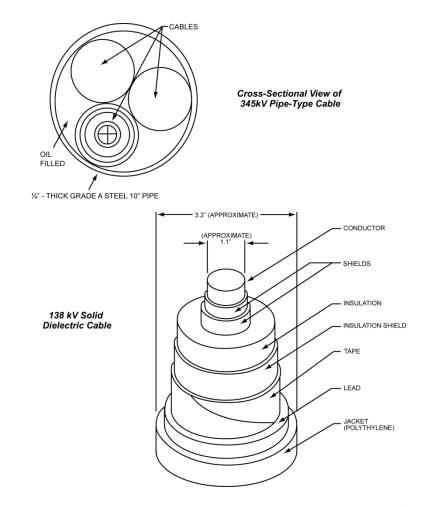

Examples of 138 kV Cable Terminations



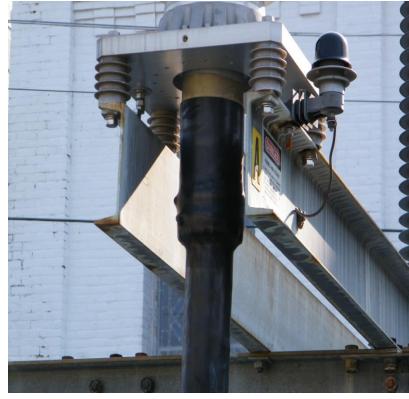

DC Cables –

- AC and DC systems can be "linked" by the use of Converter stations.
 Converter stations convert AC power to DC power (and vice versa) via the use of high power, high voltage semiconductor valves
 - Semiconductor valves are devices which (simply put) allow current to flow in only one direction, and prevent current from flowing in the opposite direction
 - Computer control over the valves allows the amount of power flowing on a DC circuit to be precisely controlled
- The Eastern Interconnection, Western Interconnection, and ERCOT are linked together via DC ties
- There are also several DC ties between New York/New England and Canada

- The use of Direct Current (DC) transmission systems is Relatively new to PJM (2008)
- Currently this technology is in use at the Neptune Regional Transmission System, and the Hudson Transmission Project. (Although other projects are in the planning stages)
- The Neptune RTS is a merchant transmission system interconnecting two regional control areas, PJM and NYISO
- Power transfer levels and changes to that level are "set" in terms of magnitude and time by the Neptune RTS operator, as directed by the PJM dispatcher
- The Neptune RTS is a monopolar, 500 kV HVDC interconnection consisting of 2 converter stations

- The western terminus, the Sayreville Converter Station, interconnects PJM at the Raritan River Substation, at 230 kV AC, in Sayreville, NJ
- FE owns, maintains and operates the Raritan River Substation
- The eastern terminus, the Duffy Ave. Converter Station, interconnects NYISO at the Newbridge Road Substation, at 345 kV AC, in Levittown, NY
- LIPA owns, maintains and operates the Newbridge Road substation
- Neptune RTS owns, maintains, and operates the NRTS equipment
- The Neptune RTS master control is at Duffy Ave Converter Station.
 The backup master control location is at the Sayreville
 Converter Station

Neptune RTS



- The Neptune RTS has a nameplate Power Transfer Capability of 600 MW
- Its continuous Power Transfer Capability is 660 MW, and its minimum Power flow is 60 MW
- There is a 4-hour, 750 MW Emergency Power Transfer Rating (as measured at Newbridge Road) for those instances when the NYISO directs LIPA to provide Emergency Power to PJM
- Future use of HVDC in PJM:
 - Hudson Transmission Project, from PSEG's Bergen Substation in New Jersey to ConEd's West 49th Street Station in Manhattan. This cable was comissioned summer of 2013, and is awaiting approval for full-power operation

- Transmission Components; (Continued)
 - Insulators keep the conductors electrically removed from the towers/poles to prevent the line from becoming grounded
 - Porcelain Bells
 - Oldest type
 - Ceramic Composites



- Epoxy Insulators
 - Less Weight, lower cost
 - Less likely to become "Contaminated"
- Care must be taken to ensure that insulators remain free of contaminants, to prevent the conductor from "tracking" or flashing over to ground
 - Salt
 - Cement dust
 - ash




• It may be possible to identify the voltage level of the line by counting the number of insulators on the string:

Voltage of Conductor	Number of "Bells" on insulator
69 kV	4-5
138 kV	7
230 kV	12-16
500 kV	24-28

 Some lines may be built and insulated for a higher voltage level than that at which they are currently operated


- Transmission Components; (Continued)
 - Shield (Static) Wires
 - Designed to "shield" the energized conductors from lighting strikes
 - These are the highest wires run on the towers
 - If a lightning stroke hits the shield wire, it creates 2 "waves" of current which travel down the line in both directions (at a speed of ~ 1000 feet/ microsecond)
 - This current is passed to the towers, and down through the ground path for the tower, away from the conductors

Examples of static wires on towers & poles

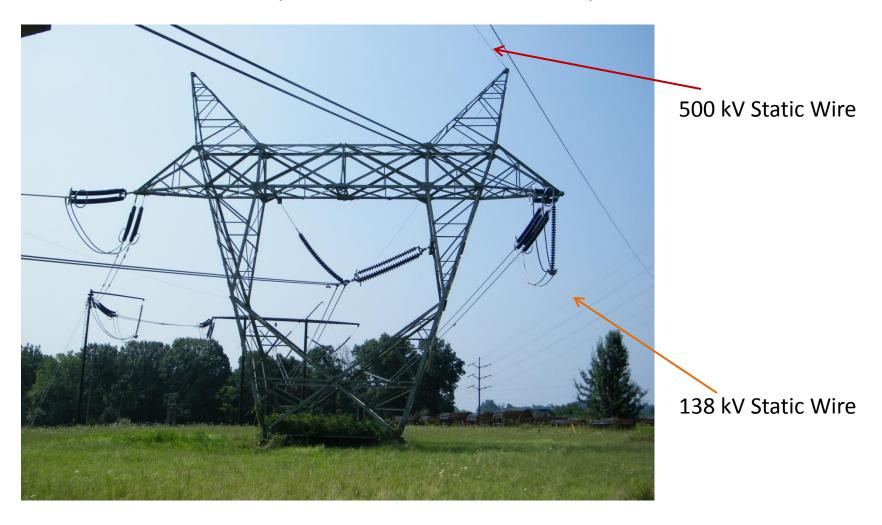

- Transmission Components; (Continued)
 - Support Structures
 - Keep the wires/cables in the air
 - Must be designed to be able to support the weight of the conductors, insulators, shield wires, and other accessories
 - Also must include the weight of the maximum ice loading expected for each component
 - Can be towers, poles, H-structures, etc.

Generic Transmission Tower Designs

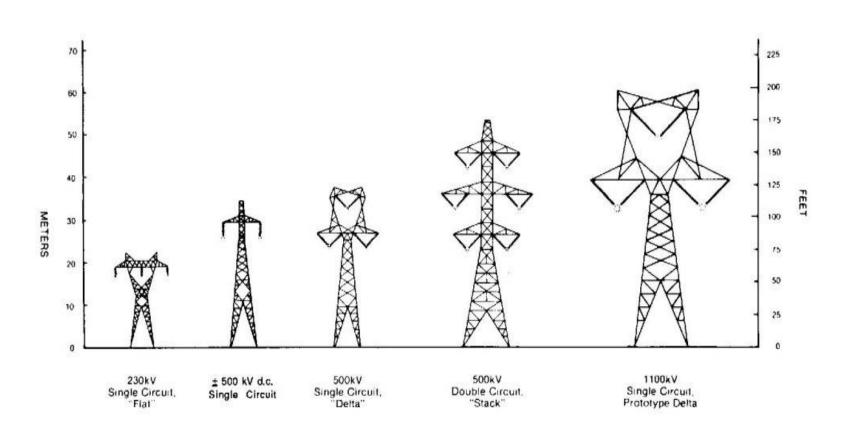

- Support structures must be securely grounded
 - To ensure the conductors are properly isolated from a ground path through the tower/pole
 - To ensure that any lightning strokes on the tower, or on the static wire can be safely dissipated to ground
 - An increase in line trippings caused by lightning strikes has been seen as a result of deteriorated (or stolen) tower grounds
- Support structures must be sized to ensure that the conductors have adequate space between them to prevent a flash-over between phases as the conductors move in the wind

Spacing required between phases at various voltage levels

Voltage (kV)	Conductors per Phase	Spacing between phases (feet)
230	1	18
345	1 or2	28
500	1, 2, or 3	38
765	3 or 4	48


- Transmission Components; (Continued)
 - Right-of-Way
 - The land area where the towers/poles are located, and through which the conductors run
 - The Right-of-way can be purchased, and owned directly by the company, or the company can lease the land from a private owner
 - If leased, the company must have agreements in place stipulating access to the lines for maintenance, repairs, vegetation management, etc.

- Generally, the right-of way is determined by the path of least cost to construct the line, considering;
 - Cost of real estate
 - Population density
 - Bodies of water
 - Environmental concerns
 - Maintenance accessibility
- This is a timely issue with the construction of new transmission lines
 - Delay in the Susquehanna-Roseland Project
 - Several state/federal/local authorities with overlapping jurisdiction can each deny a project the ability to move forward

- Recent events have provoked FERC/NERC to rigorously enforce the Reliability Standards around Vegetation Management in transmission Rights-of-way
 - Utilities must maintain 2 sets of clearances;
 - C1 clearances, which specify the distances that must be achieved between the conductors and any vegetation following the periodic clearing of vegetation
 - C2 clearances, which specify the distance that must be kept between the conductors and any vegetation during "all operating conditions"
 - C1 must be greater than C2
 - Companies can set C1 and C2 to any distance that they desire, provided they are equal to or greater than the IEEE Standard 516-2003 reference distances (Tables 5 & 7)

- These are proving challenging for utilities to meet...
 - Older lines were constructed prior to the implementation of these standards.... In some cases the minimum C1 clearance distances are greater than the constructed mid-tower (or hill top) sag for the lines.
 - How do utilities accurately determine the distances between the conductors and the vegetation under "all operating conditions"?
 - In the event a right-of-way is leased, what happens if the property owner denies permission for the member company to cut vegetation?
 - Any issues from your companies you care to share??


- Transmission Components; (Continued)
 - Line Spacers
 - Used to prevent the conductors in a 2 or 3-conductor per phase line from slapping together in the wind

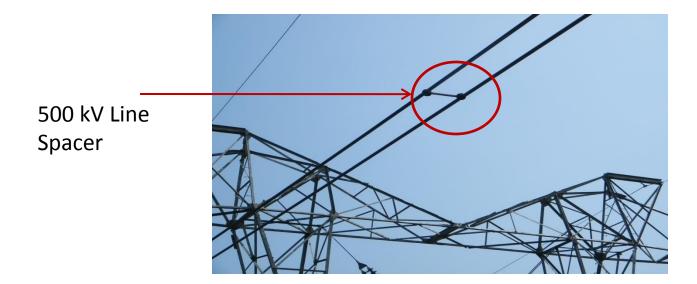


- Line spacers require periodic replacement, which is a challenge since they are generally installed on EHV lines (500 kV, 765 kV).
- Removing these lines from service for this work is generally not desired, due to the significant system impacts.
- This has led to a job opportunity for the right individuals.....

http://www.youtube.com/watch?v=LIjC7DjoVe8

- Transmission Components; (Continued)
 - Vibration dampeners (bottles)
 - Weights placed on the conductors to protect against vibration effects that could cause phase-to-phase (or Phase-to-ground) faults if allowed to go unchecked

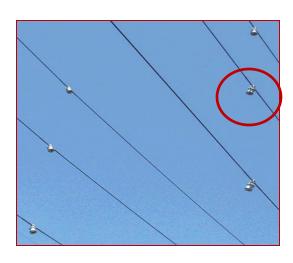

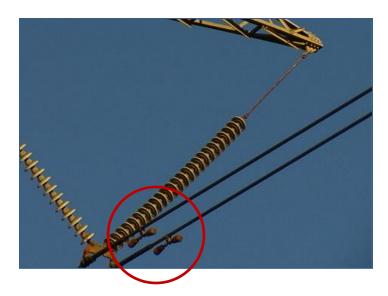

- 4 Types of Conductor Vibration;
 - Aeolian Vibration
 - Caused by the low pressure area formed on the leeward (downwind) side of a cylindrical object in the wind. (Von Karman vortex shedding)
 - Same phenomenon that makes the rigging in ships whistle, and flag poles and street light poles vibrate
 - Can be reduced by installing vibration dampeners, or reducing the tension on the conductor
 - Has resulted in failures of conductors, especially near suspension points where the movement would be greatest

Sub conductor Vibration

- Only seen on bundled conductor installations, and generally in wide-open areas with strong, sustained winds
- The conductor that is most windward creates a "wake" effect for the conductors alee, causing shear flow in addition to the wind effects
- This can potentially cause the leeward conductor to begin oscillating back and forth. This oscillation is transmitted to the other conductors because of the spacers
- This can lead to failure of the spacers as well as the conductor
- Vibration dampeners are only partially successful in eliminating this phenomenon. New dampers are being developed

Corona Vibration

- During wet weather, rain drops cling to the underside of conductors, and the electrostatic field builds up and eventually forces the drops off
- This small motive force imparts a small, low-frequency vibration to the conductor that can build up to a noticeable effect mid-span. (Between the towers)
- This is not generally a problem for current transmission systems, but has the potential to become an issue as UHV systems are developed and placed in service
- Vibration dampeners are ineffective in preventing or mitigating this phenomenon

Galloping


- Has been noted when ice builds up on the conductors and creates a nonuniform surface that the wind blows across
- This causes the conductor to begin oscillating at a low frequency which can be both severe and difficult to control
- Can also be seen in non-icing situations where the geography of the rightof-way allows the wind to move along the conductor across the bottom, and across it at the top. (Most notably along river crossings)

http://www.youtube.com/watch?v=ko4goyw1Q84&feature=related

- Transmission Components; (Continued)
 - Corona Rings




Not These.....

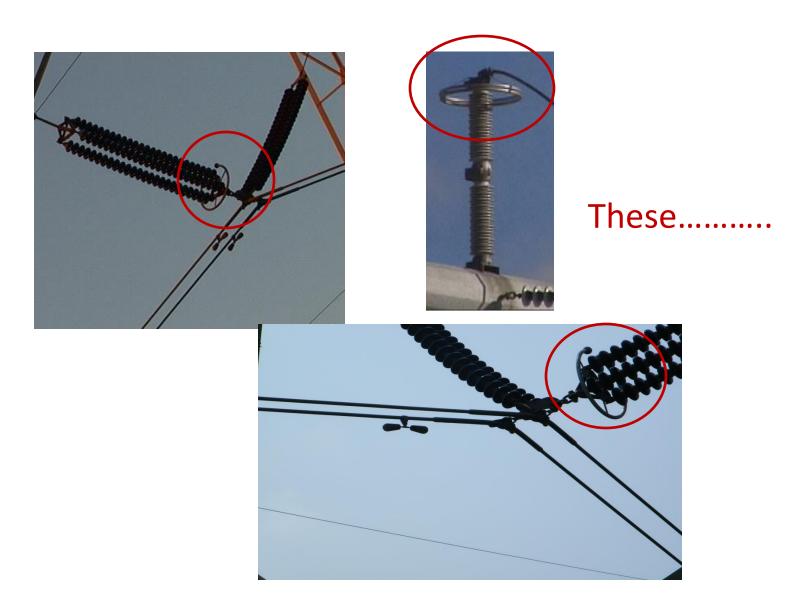

- At times, the surface potential of a conductor is so high that it actually exceeds the dielectric strength of the air around it, and it causes the air to ionize
- When this happens, it creates an audible hissing sound, radiofrequency interference, and localized glow points and ionized "streamers" that can be seen in the dark
- These effects are most notable around rough or sharp spots on the conductors or the structures
- Using corona rings at locations where rough or sharp spots occur helps to eliminate this problem


- During rain/snow events, these effects can be magnified up to 100 times, and may result in creating an induced voltage on nearby lines, or metal objects and fences in the right-of-way, constituting a safety hazard for both workers and the public
- http://www.youtube.com/watch?v=bvuSSO8Zzww&feature=related

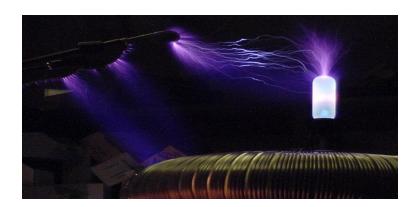

- Transmission Components; (Continued)
 - Transmission line switches
 - Most higher-voltage (230 kV and above) transmission lines are one continuous circuit from switchyard to switchyard
 - But sub-transmission systems with several substations tapped off the line are often equipped with switches. This allows the line to be sectionalized, facilitating routine maintenance and/or the ability to find and isolate faults

- These switches are of different types, and different abilities. Operators should know the capabilities of the switches that they direct field crew to operate
- The exact naming of the switch types also varies from company to company, but the general switch types are;
 - Air Brake Switches (ABS or AB)
 - These switches use a thin metal "whip" to break the arc created when their blades are opened. The whip breaks the electrical connection and the arc is extinguished in the air
 - These switches are commonly used to energize and de-energize power transformers and de-energize relatively short spans of conductor


 Air Brake switches should NOT be used to interrupt load because the arc created by doing so may not be able to be extinguished in the air

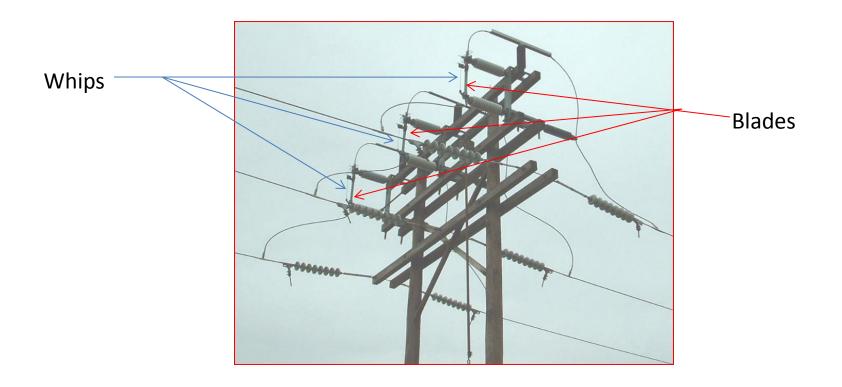

- Parallel Break Air Brake (PBAB)
 - These switches use Vacuum bottles to extinguish the arc when making/breaking parallel circuits between energized sources
 - These switches should NOT be used to energize or de-energize line sections or transformers

- Line Sectionalizing Air Brake (LSAB)
 - These switches use a combination of vacuum or gas-filled bottles and whips to perform the functions of both and ABS and a PBAB

LSAB switch

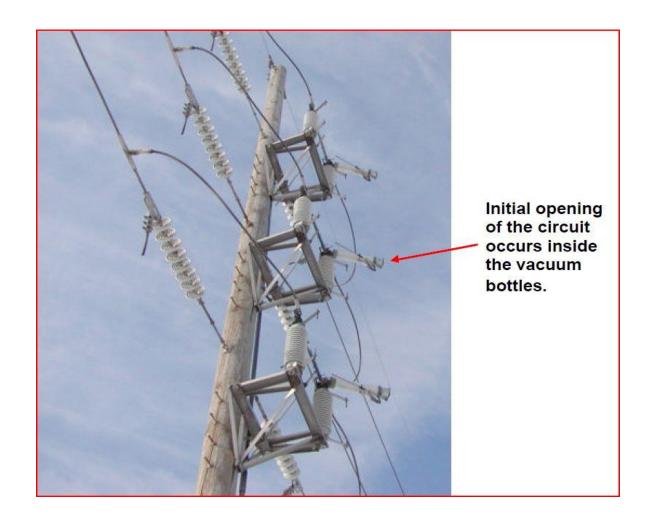

Circuit Switchers

- These switches are used both as line sectionalizing devices, and within substations to de-energize equipment
- They use a combination of gas bottles (generally SF-6) and whips to perform the same functions as a LSAB, but on higher voltage level Equipment, where the arcs would be greater



- All these switches are gang-operated, meaning that all 3 phases are linked together on one operating mechanism
- The mechanism can be either hand-operated or motor operated;



-VS -



- Environmental Effects on Transmission
 - Lightning
 - As previously discussed, the use of Shield wires and well- grounded support structures can help to reduce the effects of lightning on the power system



- Environmental Effects on Transmission (cont'd)
 - Wildlife
 - Animals can build nests on Transmission and substation components....
 - The nests themselves can create an inadvertent ground path, or interfere with the operation of devices



 Animals rest on transmission structures, and may contact the conductors as they go to and from their roosts.... (Particularly on subtransmission 69-138 kV)



http://www.youtube.com/watch?v=213-p5zkA2s&feature=related

- Ice and snow
 - As mentioned, the accumulation of ice and snow can add a significant weight load to transmission support structures.
 - Over stressed structures can bend, or snap.
 - http://www.youtube.com/watch?v=GiyD4WwTGc4
 - The weight of ice/snow can lead to line sagging between structures.
 - Lines may no longer have sufficient vertical clearance to prevent phase-to-ground faults.
 - Ice- or snow-coated insulators may provide a ground path for current, causing phase-to-ground faults.
 - http://www.youtube.com/watch?v=RG1R11Q3bi0&feature=related



Mount Storm ice storm of 2003 (courtesy of Virginia Power...)



• Transmission devices may become (literally) frozen in place and may not operate when called upon





- Ice build-up on conductors can lead to galloping conditions.....
- http://www.youtube.com/watch?v=-NgJrY6bcy8

Heat

- Overhead conductors rely on ambient air for cooling, and removal of the heat generated by the amount of current flowing through them
- As more and more current (MW) is pushed through the wire, eventually more heat is generated than can be dissipated to the surrounding air

- This causes the wire to heat up
 - Like any metal that is heated, the wire begins to expand, and lengthen
 This is referred to as *line sag*
 - Sagging lines have reduced clearance between themselves and objects below (like trees or structures)
 - This can lead to flash-over, or direct contact, resulting in line trippings (And NERC fines...)
 - Once the loading on the line decreases, or the temperature decreases, and the heat in the conductor is dissipated, it contracts again, raising the conductor
 - But it will never return fully to it's pre-sag state

- This slow heating and cooling process is know as annealing
- Annealing is a great concern for transmission lines, because it causes a reduction in the strength of the conductor
- Annealing is a cumulative effect. It only gets worse with time
- The severity of the annealing effects are based on several factors;
 - The type of metal
 - The amount and type of alloys used
 - The amount of "cooling" times between periods of heating and sag

- As temperatures increase in the summer, lines are less able to cool themselves efficiently, and can carry less current (MW) (Summer -vs-Winter ratings)
- PJM has several "rating sets" that limit the amount of MW's conductors can carry according to the ambient temperature
- Wind and rain can increase the ability of a line to dissipate heat, and reduce the likelihood of line sag occurring
 - PJM has explored the use of "dynamic" ratings to take these and other factors into account

Segment Summary

- Voltage levels of Bulk Electric System (BES) transmission lines in PJM include 115 kV, 138 kV, 230 kV, 345 kV, 500 kV, and 765 kV
- BES Transmission lines and cables are made of materials such as Copper, Aluminum, ACSR, and both AC and DC cables
- Transmission Support structures must be engineered and built to maintain proper conductor separation between each phase and the ground, and also between the phases. They must also be sufficiently sturdy to handle the weight of the associated equipment and all reasonably expected ice/snow accumulation
- Transmission Rights-of-Way must be built and maintained so that companies meet the clearances set forth in the NERC standards

Segment Summary

- The effects of corona on the transmission system can range from a slight hissing noise, to radio/TV interference, to an electrical hazard for workers and the public. The effects of corona can be minimized by designing equipment so that projections and sharp edges are minimized, and by installing corona rings
- Lightning strikes on the transmission system impart an extremely short-lived, but very high current. This current can often be dissipated by the use of shield (static) wires and by ensuring the integrity of the grounds used on transmission structures
- Line sectionalizing devices include ABS, PBAB, LSAB and Circuit switchers. Each of these devices has different capabilities and components



Questions?

Agenda



- BES Transmission Line Equipment
- BES Transmission Substation Equipment
- One-Line Diagrams

BES Transmission Substation Equipment









Agenda



- Describe the layout and characteristics of a Single bus substation configuration
- Describe the layout and characteristics of a Ring bus substation configuration
- Describe the layout and characteristics of a breaker and a half substation configuration
- Describe the layout and characteristics of a double busdouble breaker substation configuration

Agenda



- Identify the various components of a circuit breaker using an elementary diagram
- Discuss why circuit breakers use DC power for their control circuitry
- Describe the features of an air circuit breaker
- Describe the features of an oil circuit breaker
- Describe the features of an SF6 circuit breaker



- Describe the operation of Circuit Switchers and their use at substations
- Describe the features of a circuit switcher
- Describe the features of substation disconnects
- Describe examples of types of transformers used on the BES



- Describe the basis used to calculate transformer ratings and what may cause the ratings to change
- Discuss the types of transformer connections possible on the BES, and some advantages of each
- Describe the differences between a PAR and a Power Transformer



- Describe how PARs are used to control power flow on the BES
- Describe the basic components of a shunt capacitor
- Describe the effects of switching Shunt Capacitors in and out of service on the BES



- Describe the basic components of a shunt reactor
- Describe the effects of switching Shunt Reactors in and out of service on the BES
- Describe the basic components of a SVC
- Describe the effects of switching SVC's in and out of service on the BES

- A substation is a "hub" where one or more Transmission lines terminate..
- Substations allow one or more of the following functions;
 - Switching, or isolating and reconnecting parts of the system from each other
 - Voltage Transformation (either up or down)
 - Voltage Control


 Substations can look radically different, depending on their location....





- They consist of one or more "Buses" to which the transformers, Circuit breakers, and supporting equipment are connected
- We'll start by examining Buses....
- The PJM system has two basic Bus types;
 - Bus Duct type in which the energized bus is enclosed in some sort of structure
 - Open Bus Type in which the energized bus is exposed

Open Bus example:

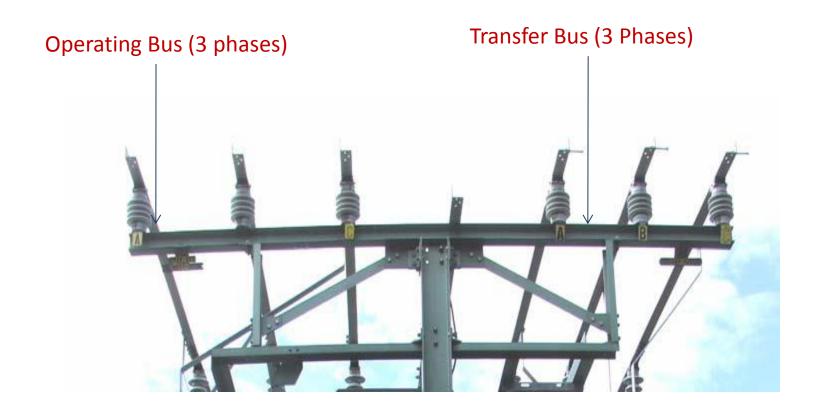

3-phase Duct Bus (SF-6 in this case)


Duct Bus Example;

500 Kv (3 phases)




- Why use a Duct Bus?
 - Space limitations
 - Remember the distance to be maintained between 500 kV conductors?
 - The ducted conductors are less than a foot apart!
 - SF-6 is such a good insulator that the physical separation distance can be greatly reduced
 - Reduce the risk of transient faults on equipment
 - You can touch/walk on this 500 kV bus
 - More about SF-6 later in the presentation......

- Substations configurations
 - There are a variety of configurations, which vary greatly in cost and reliability;
 - Single Bus

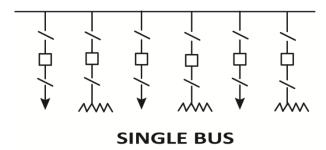

- All equipment terminates on the same bus. A fault on this bus will trip all equipment
- Taking equipment out of service for maintenance generally requires a line or transformer outage


• A variation of the single bus design is the Transfer or Feeder Bus:

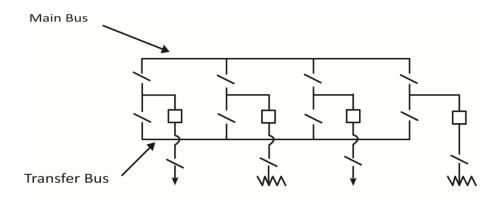

TRANSFER BUS


- Allows maintenance to be performed on equipment while keeping all lines in service
- Single Bus designs are quite cheap to construct, but not very reliable

• Ring Bus

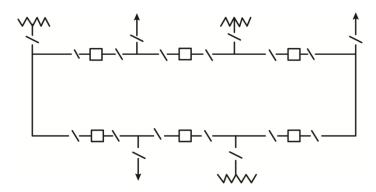


- A fault on any individual bus section will trip 2 of the circuit breakers, and the connected equipment, but the remaining equipment will remain in service
- Slightly more expensive to design and construct
- Definite increase in reliability

Breaker-and-a-Half Scheme

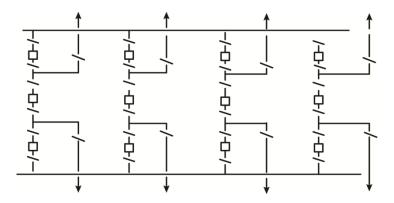

- A fault on either bus will interrupt NO equipment
- Each line is served by 2 breakers, one of which is "shared"
- Another increase in reliability, but cost continues to increase (More equipment, more complex relaying)

• Double Bus – Double Breaker Scheme

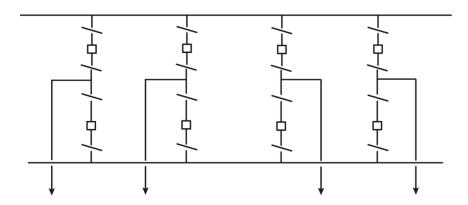


- Loss of either bus still has all equipment in service
- The "BMW" of Substation design. Maximum reliability
- Also maximum cost. Lots of redundant equipment, very complex relaying

Circuit Breakers

- Circuit Breakers (CB's) are used to create, maintain and interrupt the flow of current in a circuit under both normal and fault conditions
- CB's operate on DC power, which is supplied from the station batteries
 - Why is DC power chosen for CB controls?
 - If breakers relied on AC power, and all power to a station was lost, we would be unable to operate them!

 A basic circuit diagram for circuit breaker relay & control looks like this;

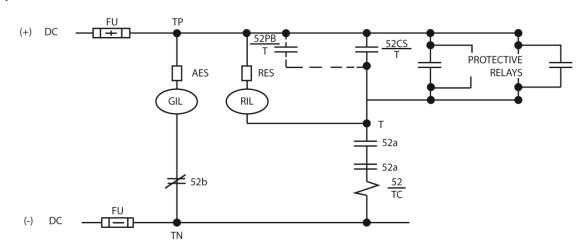

52a: Auxiliary switch "a" contact
52b: Auxiliary switch "b" contact
52CS/T: Control switch trip contact
52PB/T: Manual pushbutton trip posotion

52/TC: Breaker trip coil

FU: Fuse

GIL: Green indicating light RIL: Red indicating light


RES: Resistor T: Trip wire

TN: Megative trip voltage potential TP: Positive trip voltage potential

- CB's have mechanisms that move the breaker contacts to open or close the circuit when the CB operates
- The operating mechanism for the CB can be hydraulic, mechanical, or pneumatic
- When the contacts open, an arc is created. The various types
 of circuit breaker use various means to extinguish the arc, and
 interrupt the current flow....

- Air Circuit Breakers (Or Air Blast Circuit Breakers)
 - This type of Breaker uses a blast of pressurized air to extinguish the arc
 - These breakers are generally used in circuits operating at 138 kV and above

Air Blast CB

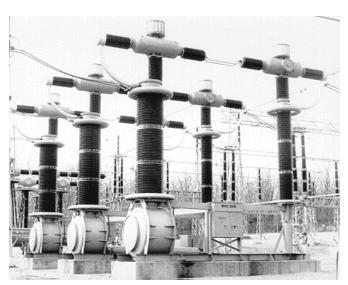

- To operate properly, the circuit breaker must have sufficient stored air pressure to be able to extinguish the arc
- These breakers are equipped with pressurizing systems to keep the air pressure above the required levels
- Should air pressure decrease, an interlock will operate, preventing the breaker from being opened while energized
- Oil Circuit Breakers
 - This type of breaker uses a tank of oil surrounding the breaker contacts
 - Because oil has a higher dielectric constant than air, the arc becomes extinguished in the oil

Oil Circuit Breakers are used at a wide range of voltage levels

Oil Circuit Breaker




• The quality of the oil in these circuit breakers must be periodically monitored. Any contaminants or moisture in the oil may impact the ability of the breaker to interrupt the arc

Exploded view of an oil CB, showing the bushings, contacts and oil tank



Gas Circuit Breakers

- This type of circuit breaker uses an insulating gas (Sulfur Hexaflouride, or SF-6) as a dielectric medium. These breakers use bursts of SF-6 gas to extinguish the arcs, and the gas itself provides an insulating medium between the phases
- In this type of circuit breaker, a spring mechanism is used to open and close the contacts
- The high dielectric qualities of the SF-6 gas allow a much smaller design to be used for this type of circuit breaker, even when they are operating at higher voltage levels

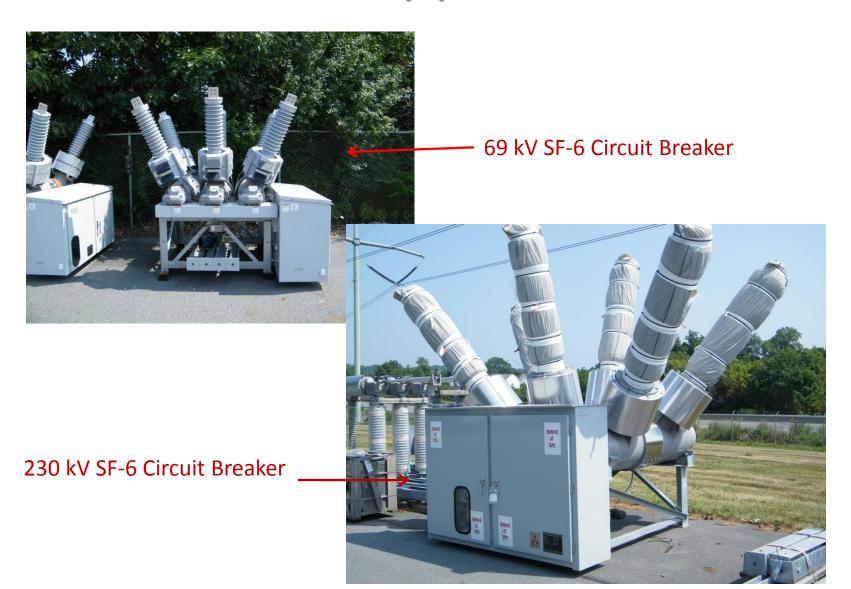




500 kV SF-6 Circuit Breakers

- Like the air in air blast breakers, the SF-6 gas needs to remain above a certain pressure to allow the breaker to open, to ensure that the arc can be extinguished
- An interlock will prevent the breaker from opening if pressure gets below the determined set point
- While SF-6 breakers and buses have definite advantages, they
 do provide some operating challenges;
 - The SF-6 Buses were designed to be installed inside enclosed substations (indoors)
 - Those companies who have chosen to ignore this recommendation and install them outdoors have noted that they do not weather well, and are prone to leakage

- Gas needs to be added to the bus on a weekly basis
- The SF-6 gas is corrosive, and tends to leak out of even properly installed systems, so periodic checking of pressure on these devices is required
- If the pressure drops below a certain point, it is not safe to add gas back to these breakers with the breaker still energized. Any debris in the bottom of the tank might be stirred up when the gas is added, and cause an internal flash-over inside the breaker (due to the small distance between the contacts in the breaker design)
- The breaker must be completely isolated from the system before gas is added under these conditions

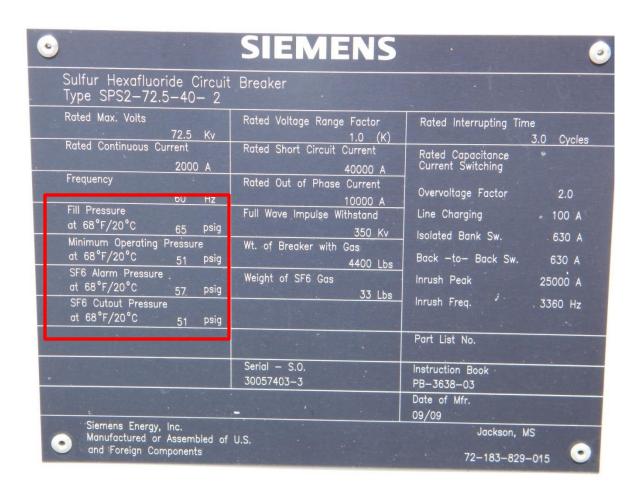

SF-6 Breaker rating nameplate, showing critical pressure limits

- Adding insult to injury, the Federal government has recently declared SF-6 to be a greenhouse gas. So utilities must track and report the amount of SF-6 gas lost each year
- SF-6 gas has a very high dielectric constant. Unfortunately, at the pressures found in gas breakers and buses, the gas will begin to condense into a liquid around 0° F. Liquid SF-6 has NO current interrupting abilities
 - To prevent this problem in winter-weather environments, the manufacturers have installed heating units on the breakers and buses to ensure that the SF-6 remains in a gaseous state during cold snaps
 - However, the heaters run off of AC power, not station batteries. And they are one-size-fit-all

Circuit Switchers

- Circuit Switchers are used to energize or de-energize higher voltage level (> 138 kV) equipment such as transformers that have a high magnetizing current
- They are more useful to an operator because they also have the ability to interrupt fault current
- This would allow a faulted transformer to isolate itself from a transmission line, without a permanent outage occurring on that line

 Their basic design is similar to the circuit switchers that are installed to sectionalize transmission lines, but they are installed inside the substations



- Circuit Switchers are generally motor-operated, ganged devices. At some installations the device must be hand operated, not motor driven. When there is no motor attached, the device is referred to as a FILBAB (Fault Interrupting Load Break Air Break)
- Another similar device installed on the 138 kV system is a TPS (Transformer Protection Switch)
 - This manually-operated device replaces power fuses on 138 kV transformers, and individual phases can trip independently for fault conditions

- All these devices have a pressure indicator to measure the pressure of the SF-6 gas which is used to extinguish the arc created when the device opens
- A second visual indicator is usually included that will show a yellow "flag", that indicates the pressure in the SF-6 gas assembly is too low to safely open the device
 - On motor-operated devices, automatic tripping may be disabled
 - A substation crew must then add gas to the device before it can be relied upon to function properly

 More information (and some fun) concerning SF-6 gas can be found from this link;

http://www.youtube.com/watch?v=u19QfJWI1oQ

Disconnects


- Disconnects are devices installed primarily to provide a visible break between pieces of equipment and the remainder of the power system, to allow personnel to work safely to maintain or repair BES components
- Disconnects generally have no ability to interrupt fault current or drop load. They can only energize or de-energize equipment

Disconnects can be individually operated (at sub-transmission voltage levels) or gang operated





They can be hand operated, or motor operated

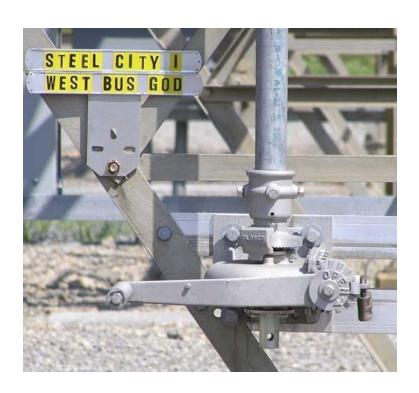




- Some common device names are;
 - Disconnects
 - Gang Operated Disconnects (GOD's)
 - Motor Operated Disconnects (MOD's)

• Transformers



- Transformers are used to transfer AC power at one voltage level to an equivalent level of AC Power (neglecting minimal losses) at a different voltage level
- This transfer occurs through Magnetic Induction, rather than through direct conduction of the power
- If the switching location does not contain a transformer, it is technically referred to as a switchyard, rather than a substation

Basic schematic of a Power Transformer

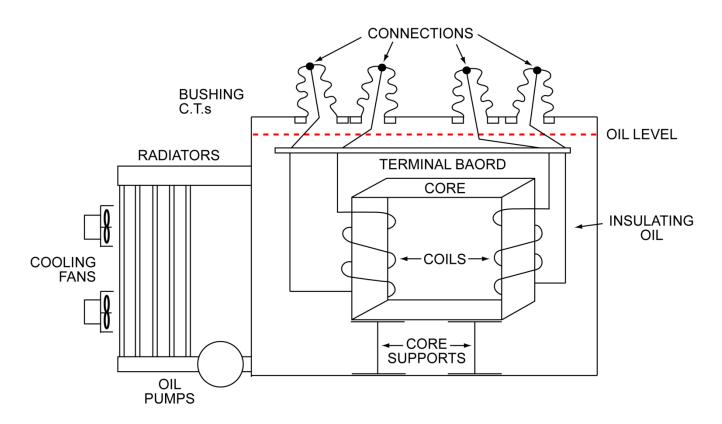


Power Transformer

 The level to which the voltage changes within the transformer is dependent upon the turns ratio;

$$Vs = Vp \frac{Ns}{Np}$$

- Virtually all Power Transformers have Taps in one or more windings to slightly vary the turns ratio, and allow slight adjustment of the system voltage
 - Some sub-Transmission, and most distribution transformers, have Taps which are "fixed". These taps can be changed, but only by hand, and only when the transformer is de-energized

- Most BES transformers have a mechanism called a LTC (Load Tap Changer) or TCUL (Tap Changer Under Load), which is a mechanical device that allows the Tap position of the transformer to be changed while it is in operation
- Ongoing control of bus voltage at a substation is usually accomplished via these LTC's, and they may make many tap changes throughout the day

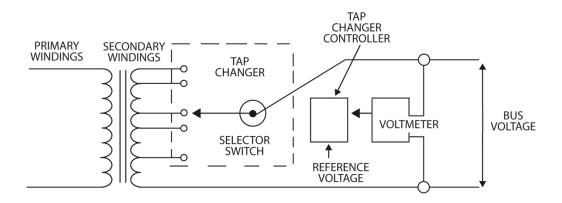

Simplified Diagram of a Tap Changer

- The internal mechanism of a LTC has no ability to break the load current across the turns of the transformer, so it momentarily creates a "bridging position" by energizing the new tap position, then disconnecting the old tap
 - This "bridging position" creates an electrical "short" across the turns, and has the potential to cause arcing and excessive heating that can damage the transformer
 - Occasionally a transformer can become "stuck" between taps, which will leave the LTC in a bridging position. It is important that this condition be recognized and corrected as soon as possible
- http://www.youtube.com/watch?v=OQRSBJRCUW4&feature=related


- On the BES, the use of LTC's allows the Transformers to act as MVAR "shovels". Reactive Power (MVAR's) can be transferred from one voltage level to another
- The transformers themselves do not create MVAR's, they merely have the ability to move them from the high voltage side to the low voltage side (Or vice versa)
- MVAR losses within a transformer increase as the loading on the transformer increases


- In addition to the main Power Transformer, most substations also use transformers in additional applications;
 - Station Service Transformers:
 - Used to supply switchyard lighting, control house lighting and HVAC, and to supply the battery charger for station batteries
 - Most BES Substations have at least 2 station service transformers, supplied from independent sources. In most cases the sources will auto-matically transfer from one source to another if the feed to that source is lost



- Current Transformers;**
 - Used to change BES current measurements into levels of current that can be used by relay/monitoring equipment



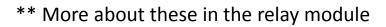

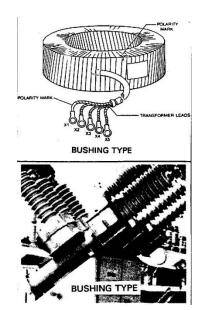

- Potential Transformers;**
 - Used to change BES Voltage measurements into measurements that can be used by relay/monitoring equipment



** More about these in the relay module




- Power Transformers can be either;
 - <u>Step-up</u> Which increase the voltage level of the power. These are most commonly employed at Generating stations to raise the voltage from Generator output levels (~ 24 kV) to Transmission level voltages
 - <u>Step-down</u> Which decrease the voltage level from Transmission to subtransmission, or distribution levels
- Power Transformers can be either sets of single-phase units, or a single 3-phase unit. Generally, the higher the primary voltage level, the more likely it is to be single-phase units

- Transformer ratings are determined primarily by the manufacturer, and are generally dictated by how well the transformer can disperse the heat generated by its operation
- To cool the oil, transformers are equipped with a set of pumps, which circulate the oil through a set of radiators external to the transformer oil tank. These radiators help to cool the oil
- Most BES transformers also have one or more banks of fans, which blow air onto the radiators to assist in the cooling process

- These banks of fans come on in stages, depending on the temperature of the oil
- Transformer ratings are given in levels, depending on how many of these cooling mechanisms are in service

Designations and descriptions of the cooling classes used in power transformers


Previous designation	IEC designation	Description
OA	ONAN	Oil-air cooled (self-cooled)
FA	ONAF	Forced-air cooled
OA/FA/FA	ONAN/ONAF/ONAF	Oil-air cooled (self-cooled), followed by two stages of forced-air cooling (fans)
OA/FA/FOA	ONAN/ONAF/OFAF	Oil-air cooled (self-cooled), followed by one stage of forced- air cooling (fans), followed by 1 stage of forced oil (oil pumps)
OA/FOA	ONAF/ODAF	Oil-air cooled (self-cooled), followed by one stage of directed oil flow pumps (with fans)
OA/FOA/FOA	ONAF/ODAF/ODAF	Oil-air cooled (self-cooled), followed by two stages of directed oil flow pumps (with fans)
FOA	OFAF	Forced oil/air cooled (with fans) rating only—no self-cooled rating
FOW	OFWF	Forced oil / water cooled rating only (oil / water heat exchanger with oil and wa- ter pumps)—no self-cooled rating
FOA	ODAF	Forced oil / air cooled rating only with di- rected oil flow pumps and fans—no self-cooled rating
FOW	ODWF	Forced oil / water cooled rating only (oil / water heat exchanger with directed oil flow pumps and water pumps)—no self-cooled rating

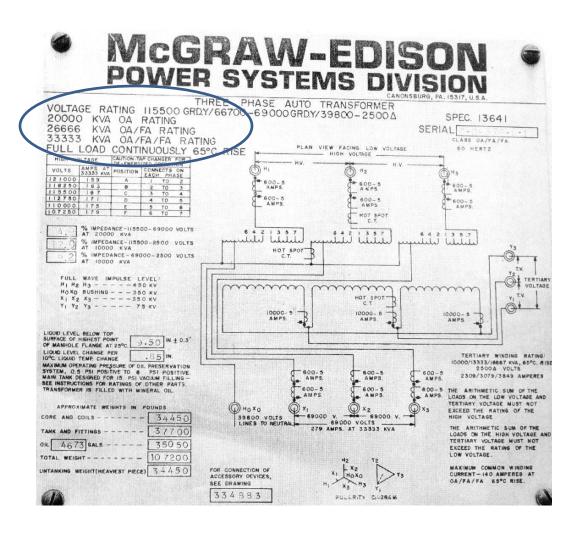


Transformer Name Plate, showing the ratings with various cooling systems in service


- If a set of fans (or the pumps) becomes inoperative, the rating of the transformer may need to be decreased, to prevent damage
- Transformer fans and pumps are generally supplied via Station Service Transformers
- Excessive heating of a transformer can lead to breakdown of the insulation, which can decrease the life of the transformer
- In excessive heat conditions, some companies have also been known to spray down their heavily loaded transformers with water to help in cooling....

- Transformers can be connected in various configurations:
 - Delta-Delta
 - Wye-Wye
 - Delta-Wye
 - Wye-Delta

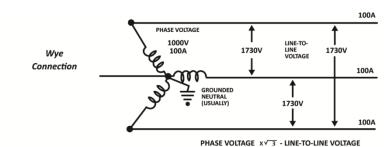

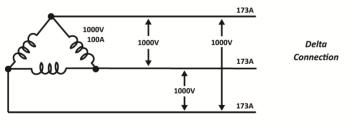


PHASE VOLTAGE - LINE-TO-LINE VOLTAGE

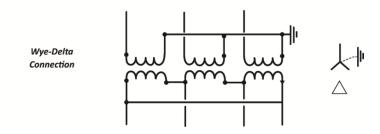


- Some advantages of each of the connections include; (these 3 are primarily distribution applications)
 - Delta-Delta Relatively immune to Harmonic issues. There is the possibility that a 3-phase load can be supplied using only 2 transformers (in open-delta configuration) either in an emergency or by design
 - Delta-Wye –Has a solidly referenced ground, and is ground-fault protected. But is susceptible to harmonic inteference
 - Wye-Delta Has a solidly referenced ground, and is ground-fault protected. 60 % of connected 3 phase load can be supplied by only 2 transformers

- On the BES, the most common connection type is Wye-Wye connections. Why?
 - There are no phase angle displacements caused when using a Wye-Wye connection. This means that there are fewer complications when connecting the transformer between different voltage levels
 - Since the phase-to-neutral voltage is only ~60% of the phase-to-phase voltage, you need fewer turns in the windings to create the same level of excitation in the core
 - If the neutral of the Wye connection is grounded, you can have less insulation at the neutral end of the wiring

- Another relatively new installation on the PJM system is a Variable Frequency Transformer (VFT)
- Installed between the Linden Co-Gen facilities and the PSE&G 230 kV system
- It's purpose is to balance the power output of the Linden Co-Gen plant between the PSE&G 230 kV system and the NYISO 345 kV system
- This tie is also regulated via the PAR's between Linden and Goethels

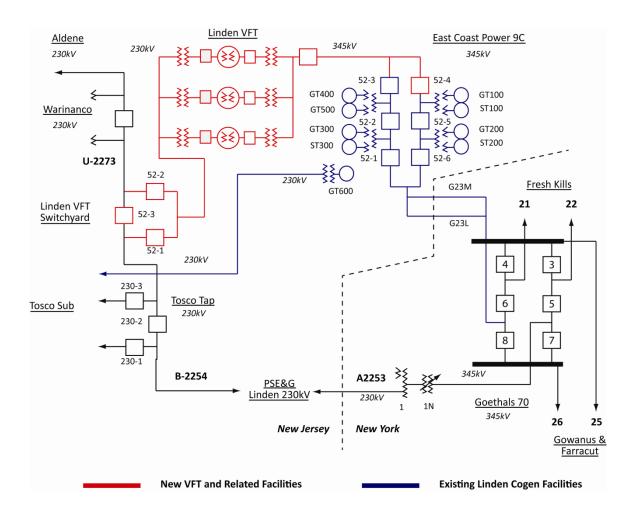

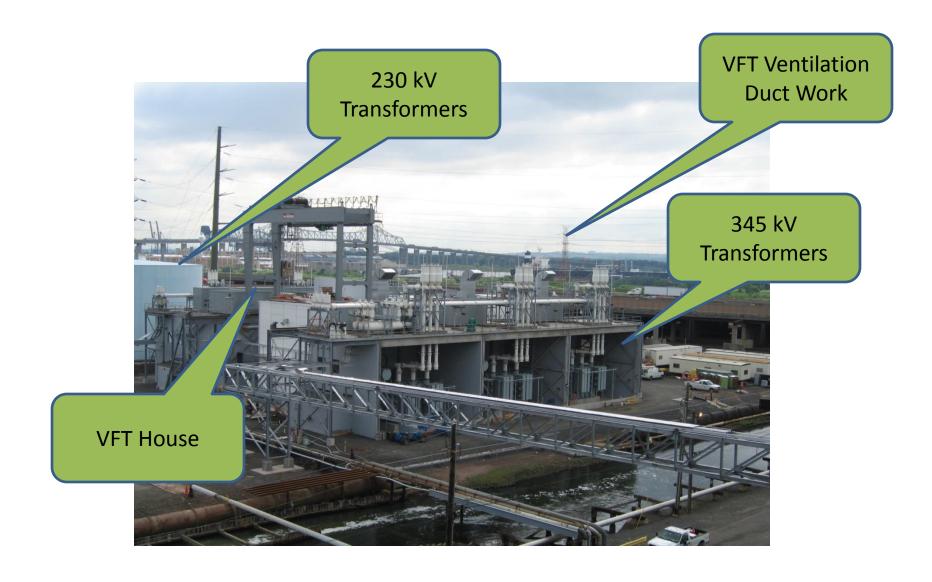


- The Linden VFT creates 300 MW of transfer capability between the associated 230 kV and 345 kV systems
- Scheduling power flows is similar to scheduling flows on the Neptune Cable
- Can be operated in "Local Control Mode" or "PJM automatic" mode
 - On the "PJM Automatic" mode, the VFT's will follow PJM dispatch signals to control power flow
 - Each VFT can respond at 100 MW/min (Max)
 - Normal ramp rate is 10 MW/min

Phase Angle Regulators (PAR's)



- Phase Angle Regulators are used to control power flow across electric paths on the BES
- Rather than re-directing MVAR flow, they change the rate of MW flowing on the lines to which they are connected
- Their construction is similar to that of a transformer;
 - In a PAR, the phase angle of the secondary winding is adjusted by connecting an excited winding to the phases
 - Adjusting the voltage in the secondary windings changes the power angle through the PAR, affecting power flow on the connected line


Simplified schematic of a PAR Secondary winding circuit

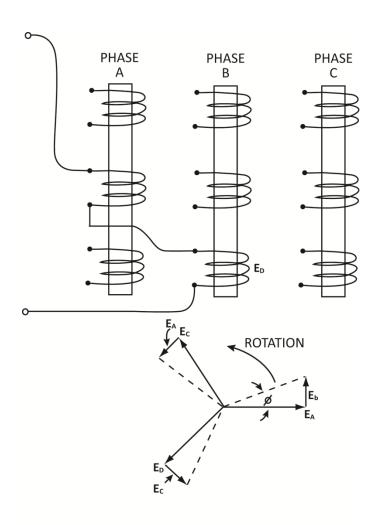

Simplified Diagram of Phase Shifting Transformer

- PARs provide an artificial increase or decrease in the phase angle difference between 2 buses
 - Remember: MW's flow "downhill" on Phase Angle...

$$P = \frac{V_1 V_2}{X} \sin \delta$$

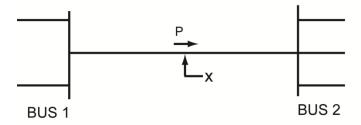

P = Power Flow from 1 to 2 (MW)


 V_1 = Volatage at 1 (kv)

 V_2 = Volatge at 2 (kv)

 $X = Impedance from 1 to 2 (\Omega)$

 δ = Phase Angle Difference Between V_1 and V_2

PJM@2014

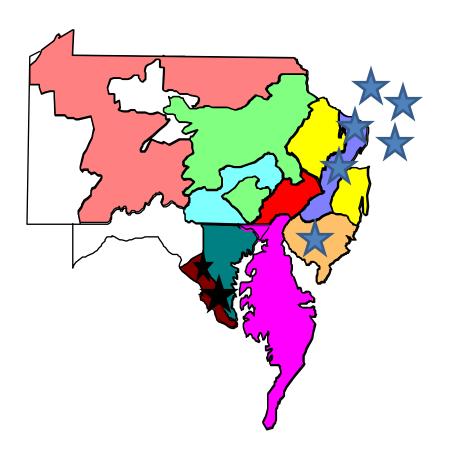

PAR Locations within PJM;

<u>NY</u>

- Farrugut 345kv (2) -- Hudson (PS) interface
- Goethals 345kv -- Linden (PS) interface
- Ramapo 345kv (2) Branchburg (PS) interface

<u>PS</u>

- Linden 230kv
- Waldwick 230 (3)
- New Freedom 230kv (2)
- Trenton 138kv

PEP


- Oak Street 138kv (2)
- Ft Slocum 69kv

- To adjust the position of a PAR (and by extension, change the power flows across an interface), all parties involved must be in agreement
- Increasing the voltage in the secondary windings will Increase flows on the line to which the PAR is connected
- The NY and PS PAR's move after discussions between PJM and NYISO

The PEP PAR's can be moved as needed by PEPCO

Shunt Capacitors

- Because Reactive Power (MVAR) does not travel well, we need a source of MVAR's close to our loads to ensure that our customers are served with the proper power factor
- Capacitors are installed on the BES to provide this Power Factor Correction, and to support the increased MVAR requirements that result from operating transmission lines above their SIL values

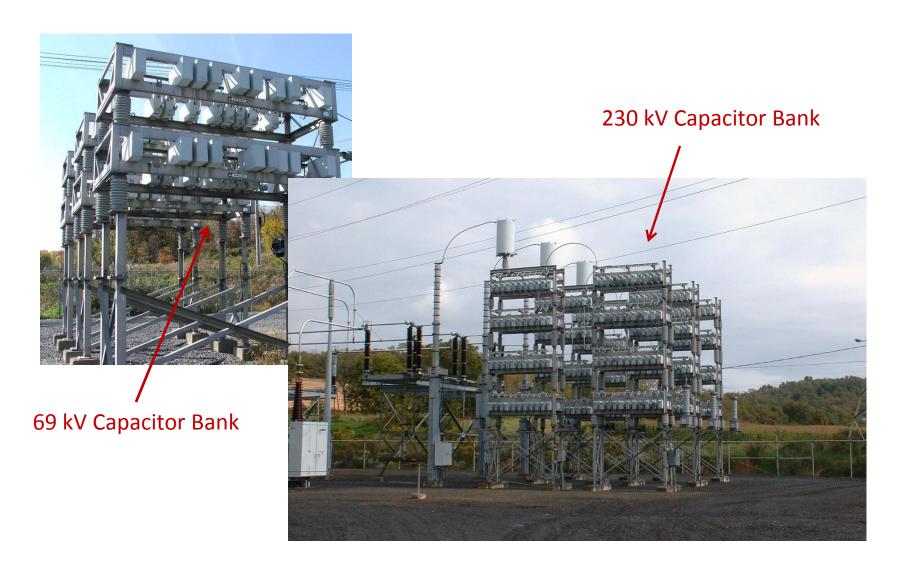

 Capacitor banks consist of individual capacitor cans paralleled together into groups. These groups are then connected in series between the primary voltage source and ground to form single-phase banks. Three single-phase banks connected in a grounded-wye configuration form a three-phase bank

- Capacitor "Banks" are rated to provide a set amount of MVAR's when connected to the system at nominal voltage levels
 - Remember that capacitor output is dependant upon the square of the source voltage
 - At 90% of nominal voltage, a capacitor would put out only 81% of its stated MVARs
 - $(0.9)^2 = 0.81 \text{ or } 81\%$

 Each individual capacitor "Can", or unit, has it own fuse to protect the Bank as a whole if the can should develop a fault

 A failed can will cause it's fuse to blow, isolating it from the system, but allowing the rest of the bank to remain in service

Fuse would connect here

- Capacitors act as a source of MVARs for the BES. Placing a capacitor in service at a substation bus will raise the voltage at that location
- Removing a capacitor from service will lower the voltage at that location
- In addition to the fuses for each individual can, capacitor banks are connected to the system via circuit switchers, or by a combination of circuit breakers and disconnect switches
 - A "visible break" is usually necessary to consider the equipment safely isolated and allow maintenance or repairs to the equipment

- It is important to remember that capacitors are not immediately de-energized once they are disconnected from the BES
 - The nature of a capacitor is to store electric charge. This can be as high as 500 kV
 - A discharge resistor is connected across the capacitor terminals. This
 resistor gradually discharges the capacitor, reducing the voltage across
 the terminals. It generally takes 5-15 minutes for the capacitor to
 discharge to safe levels of voltage

Series Capacitors

- Series capacitors are used primarily to reduce the inductance of long transmission lines, which makes the lines appear "shorter" to power flows
- This has the effect of reducing the power angle across the line, allowing power transfers across that line to be increased, without a corresponding decrease in system stability

- Series capacitors can be either "fixed" (the whole bank in or out of service as a unit) or thyristor controlled
- A Thyristor Controlled Series Capacitor (TCSC) has the added advantage of allowing control of the current (power) flow on parallel transmission lines, which further improves system stability
- Advanced TCSC's are even capable of helping to dampen Power system Oscillations

- Series capacitors are widely used in the Western Interconnection, because so many of their transmission lines are very long
- A few Series capacitors are installed in the AEP area of PJM, on the 345 kV system, at the Kanawa River substation

Shunt Reactors

- On the BES, long transmission lines are subject to the ferranti effect, which causes an open-ended (or very lightly loaded) transmission line to look like a large capacitor, supplying MVARs from the line, and raising system voltages
- To remove these MVARs from the system when they could cause problems, (as in during light load periods or during system restoration efforts) we employ Shunt Reactors, which act as VAR sinks

- Shunt reactors are basically an iron core surrounded by coils of wire. Large reactors may be cooled by surrounding the core with an oil-filled tank. Smaller reactors can have their cores cooled sufficiently by being open to the air...
- When energized, a shunt reactor will absorb MVARs from the BES. Each reactor is rated to absorb a set amount of MVARs

Typical aircooled reactor



Oil-Cooled shunt reactor



- Reactors act as a sink for MVARs for the BES. Placing a reactor in service at a substation bus will *lower* the voltage at that location
- Removing a reactor from service will raise the voltage at that location
- Like capacitors, Reactors are connected to the system via circuit switchers, or by a combination of circuit breakers and disconnect switches

Series Reactors

- Series reactors are installed to either;
 - Reduce the amount of available fault current or
 - To match the impedance of parallel feeders
- When Generation capacity is expanded, or additional feeders are added to an existing substation, the impedance of the connected circuits changes, changing the amount of available fault current at that station


- As a result, the new level of fault current may exceed the rating of some of the installed equipment
- Installing Fault Limiting Series Reactors adds impedance to the system, reducing the amount of available fault current at their location, and preventing the need to replace equipment along with system upgrades
- Fault Limiting reactors are installed throughout the PJM system

- Static Var Compensators (SVC's)
 - SVC's are a combination of Reactors and Capacitors at the same substation, which are under a common computer control scheme.
 - The computer will monitor the voltage at the substation, and switch the individual reactors and capacitors in and out of service as necessary to maintain the desired voltage schedule at that location.
 - Accomplished by using high-speed thyristors...


SVC Installation



- SVCs are rated according to their maximum MVAR intake and output abilities;
 - Max inductive means all reactors are in service, all capacitors are out of service
 - Max Capacitive means all Capacitors are in service, all Reactors are out of service
 - In this case, SVC has a total range of 250 MVAR....

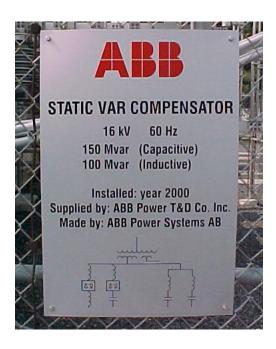


- Because SVC's use capacitors, their ability to supply MVARs is also directly linked to the voltage at the time the units are energized....
 - Remember Capacitor output is proportional to the square of the voltage....
- SVC's are coming into more common use throughout PJM
 - Black Oak Has the largest SVC currently on the system, connected to their 500 kV yard. Can range from 145 MVAR inductive to 575 MVAR Capacitive

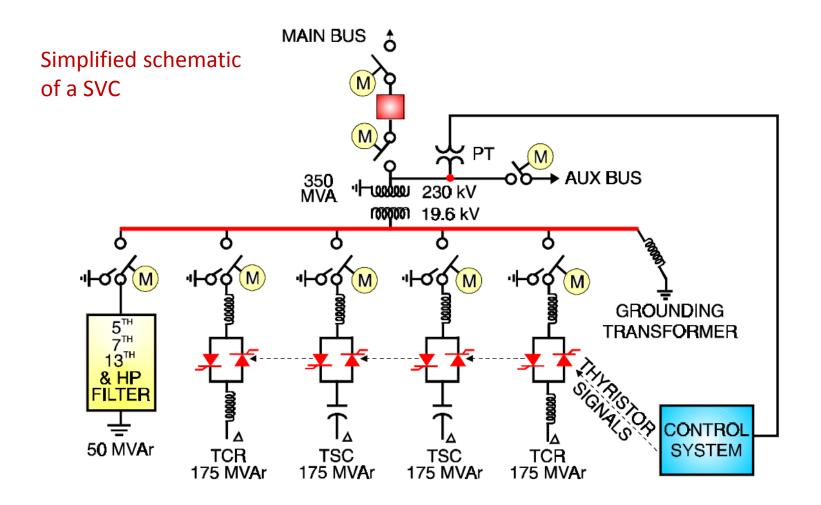

- Other Substation Equipment;
 - Wave Traps
 - Wave Traps are inductors and capacitors installed in parallel in a single device
 - They act as high impedance "trap" to prevent Carrier wave signals from impacting the transformers and other Substation equipment
 - Carrier Waves are used on the BES in high-speed relaying applications and will be discussed more in the ITP Relay module

500 kV Wave trap

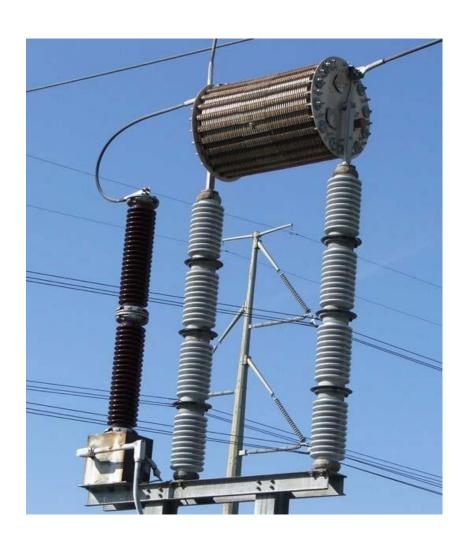

Control House

 The control house contains switchboard panels, batteries, battery chargers, supervisory control, power-line carrier, meters, and relays and provides all weather protection and security for the control equipment



- A mimic bus is used in many substations to allow "remote" control to the circuit breakers, MOD's, circuit switchers and other devices. The mimic board is set up to represent (or mimic) the electrical layout of the substation
- Indicating lights built into the mimic board near the control switches show the current status of the equipment in the yard
- If the substation has a synchroscope, it will be attached to the mimic bus. We'll discuss the importance of a synchroscope during the System Restoration Module




Mimic Bus




Mimic bus with synchroscope

- Newer substations are being placed in service that have no mimic bus.
 Instead, the remote device controls are operated by a computer system,
 and a pc display provides the electrical station layout
- This design is known as HMI (Human Machine Interface)
- All control, tagging, and relay functions that would have used the mimic board are copied in the HMI software


Screen shot of an HMI CB display

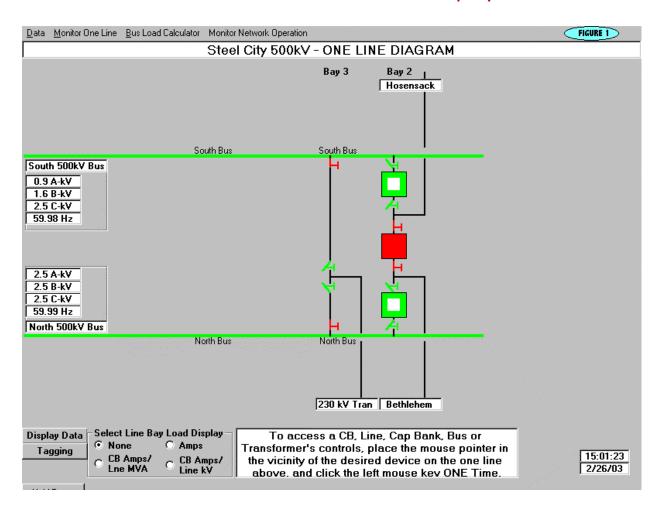

Screen shot of the HMI CB and Relay control screen

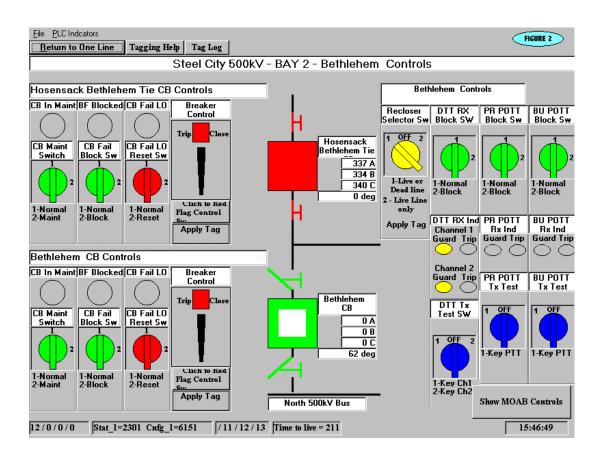

Screen shot of the HMI Transformer control screen

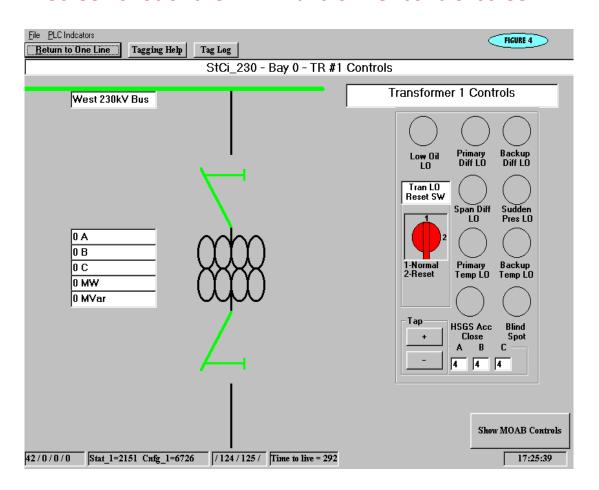


Substation Batteries

- Substation Batteries supply DC to relays, indicating lamps, SCADA, and trip coils in circuit breakers
- Individual batteries are arranged and electrically connected in banks.
- Battery chargers (supplied from AC station service) are provided to maintain the charge on the batteries
- The charge level on the battery bank is generally monitored and will alarm for high or low voltage levels
- The continuity of the DC circuit supplied by the batteries is also monitored for the presence of a ground



Grounding Grid

- The grounding system is a system of conductors laid out in a grid pattern beneath the entire substation
- A good (low resistance) connection to earth is very important for the proper operation of fault detecting relays in the substation
- The grounding grid also provides a location to which to connect the grounding mats, which are used to protect personnel as they operate switches in BES Substations

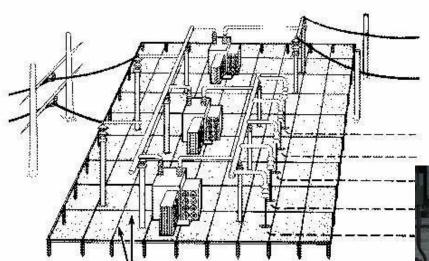


Typical Grounding grid layout


Grounding mat installed by a MOD




 In a Single bus substation configuration, all breakers terminate on the same bus

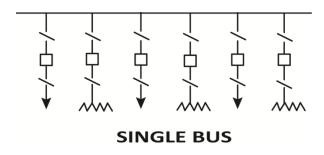


 In a Ring bus substation configuration, each bus section is protected by a CB on each side

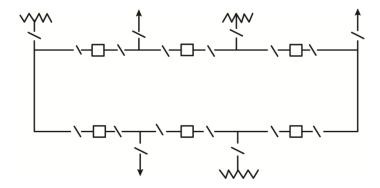

 In a breaker and a half substation configuration there are 3 breakers between the 2 operating buses

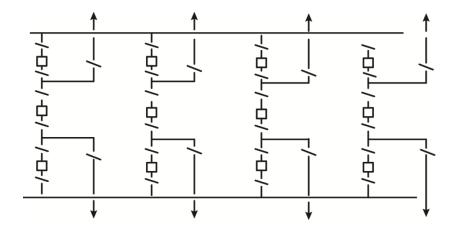

 In a double bus- double breaker substation configuration each bay is supervised by 2 circuit breakers

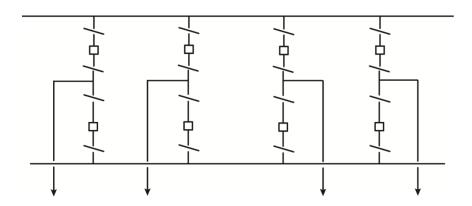

 The various components of a circuit breaker include, the trip circuits, the indicating lights, auxiliary switches, and the control power fuse

- Circuit breakers use DC power for their control circuitry to ensure that they can be controlled during system restoration events or during a loss of station service at the switchyard
- An air circuit breaker uses a blast of pressurized air to extinguish the arc created by opening a circuit. They may have lockouts preventing a trip if the air pressure decreases below pre-set values

- An oil circuit breaker uses a tank filled with a high dielectric oil to extinguish the arc created by opening a circuit. The oil may be hazardous, and can be flammable
- An SF6 circuit breaker uses a high dielectric gas (SF-6) to extinguish the arc created by opening a circuit. They may have lockouts preventing a trip if the gas pressure decreases below pre-set values

- Circuit Switchers are used at substations to provide a means of disconnecting equipment that may require interrupting fault current
- A circuit switcher consists of a motorized disconnect assembly, which uses a cylinder of SF-6 gas to extinguish the arc created when the circuit is opened

- Substation disconnects are non-load break devices used primarily to isolate de-energized equipment from the system, providing a "visible break" for personnel to work safely
- Some types of transformers used on the BES include;
 - Power Transformers
 - Station Service Transformers
 - Potential Transformers (PT's)
 - Coupling Capacitor Voltage Transformers (CCVT's)

 Transformer ratings are determined by the manufacturer, and are set by the ability of the transformer to safely dissipate the heat created while it is in operation. Loss of any of the fans or pumps that help in the cooling may cause the ratings to change

- Transformer connections possible on the BES, include;
 - Delta-Delta Relatively immune to Harmonic issues
 - Delta-Wye –Has a solidly referenced ground, and is ground-fault protected
 - Wye-Delta Has a solidly referenced ground, and is ground-fault protected. 60 % of connected 3 phase load can be supplied by only 2 transformers

- Wye-Wye connections
 - There are no phase angle displacements caused when using a Wye-Wye connection
 - Fewer turns are required in the windings to create the same level of excitation in the core
 - Less insulation is required at the neutral end of the wiring.
- While PAR's and Power Transformers have a nearly identical construction, the Phase windings of a PAR are connected via an excited winding, allowing the phase angle through the device to be adjusted

- Changing the tap setting on a PAR changes the phase angle across the connected line, allowing MW flow to be increased or decreased, and affecting the flows on surrounding lines
- A Capacitor bank is a collection of individually fused cans, connected to the BES via a circuit switcher or CB and disconnect switch

- Placing a Capacitor in service supplies MVARs at that location and raises voltage. Removing a Capacitor from service will lower voltage at that location.
- Shunt reactors are metal cores surrounded by coils of conducting wire. They can be air-cooled or oil cooled.

- Placing a Reactor in service consumes MVARs at that location and lowers voltage. Removing a Reactor from service will raise voltage at that location.
- Static Var Compensators (SVC's) are a computer-controlled combination of Reactors and Capacitors.
- When placed in service a SVC will act to control voltage at the reference bus to a pre-determined set point.



Questions?

Agenda



- BES Transmission Line Equipment
- BES Transmission Substation Equipment
- One-Line Diagrams

Agenda





 Given a one-line diagram, identify the equipment located at a Substation or Switchyard

One-Line Diagrams

- One-line diagrams are used to display the equipment installed at substations in a uniform format
- Allows a large, uncluttered overview of large parts of the interconnected system...


One-Line Diagrams

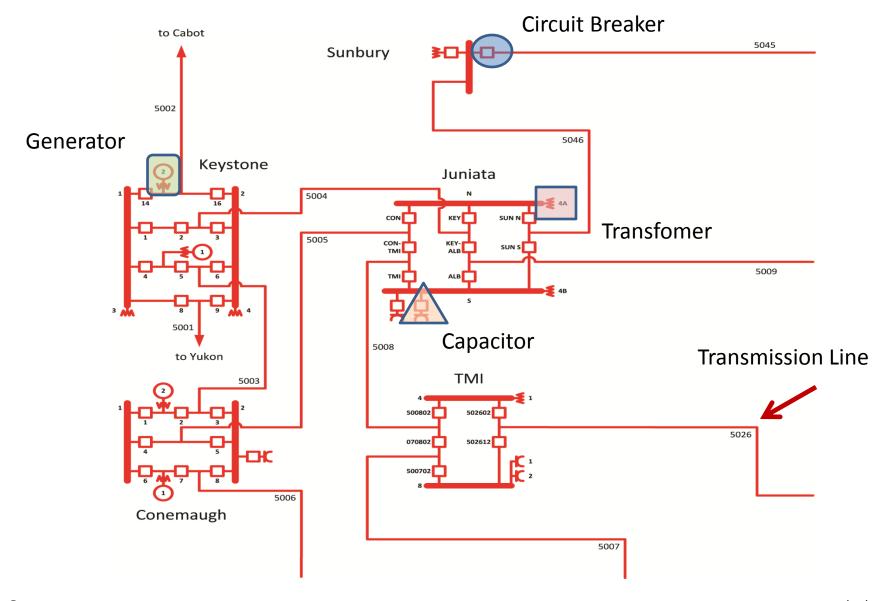

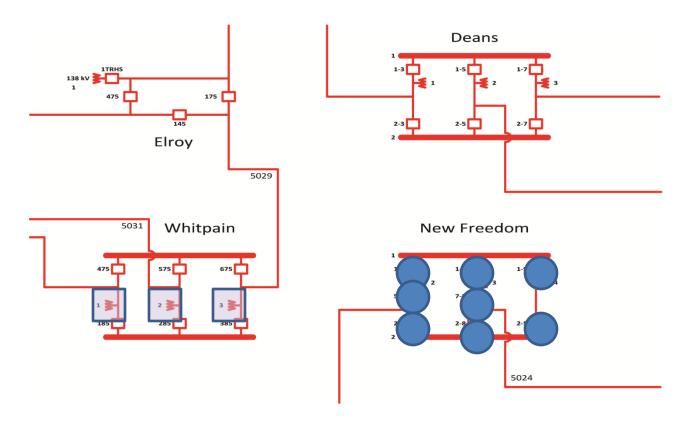

How many circuit breakers are located at New Freedom Substation?

How many transformers are located at Whitpain Substation?

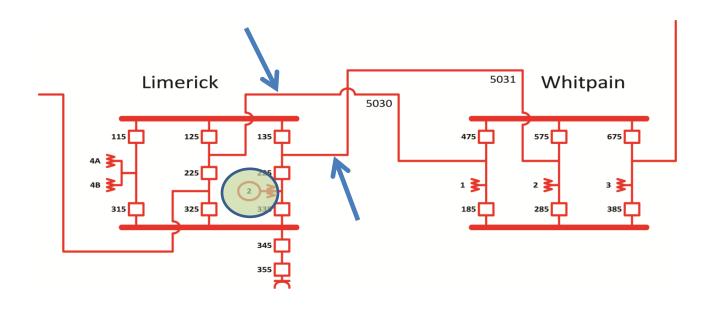


How many lines connect Limerick and Whitpain?

2

Which station has a generator?

Limerick

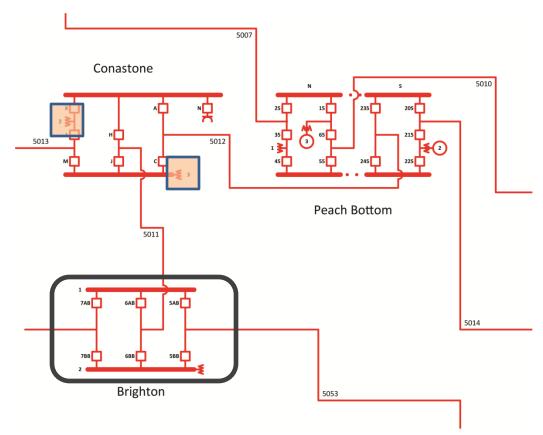


What type of Station design is Brighton?

Double Bus – Double Breaker

How many transformers are located at Conastone?

2

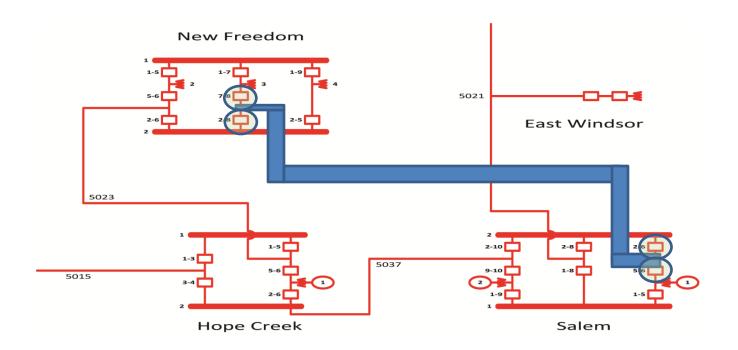

If the 500 kV line between New Freedom and Salem develops a fault, which breakers have to open to isolate that fault?



Questions?



Resources and References

- "Electric Utility Systems & Practices", 4th Edition. Homer M. Rustebakke (Ed.), © 1983
- "Brunner Island CCVT Explosion", White paper by Thomas Laganosky, October 2005
- "HMI Human Machine Interface", Douglas Guignet, October
 2004
- PPL Training Module ERO 040 "Substation Design & Operating Characteristics", January 2005



Resources and References

- PPL Training Module ERO 230 "Installing & Maintaining Substation Switches", October 2005
- PPL Training Module GTD 260 "Orientation to Substations", November 2000
- PPL Training Module LMO 230 "Switching Procedures Overhead Devices", August 2003
- PPL Training Module LNM 014 "<u>Identifying T&D Line Hardware</u>", August 2001